



# **SYLVANIA**

Professional portable digital A.V.

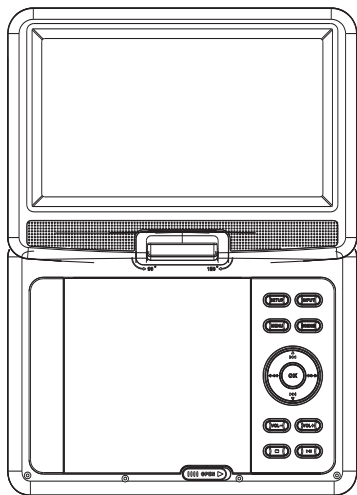

## **USER'S MANUAL SDVD9000**

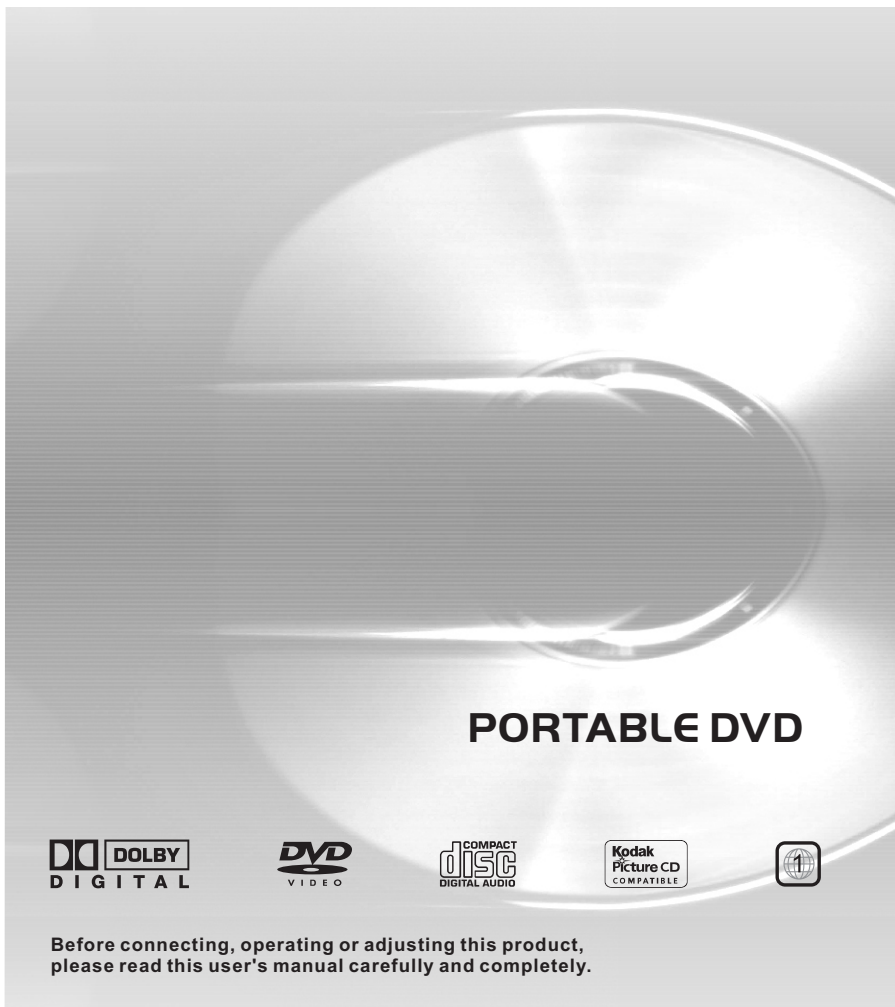

## **PORTABLE DVD**



Before connecting, operating or adjusting this product,  
please read this user's manual carefully and completely.

# Table of Contents

## Contents

<b>Table of Contents</b>	P1
--------------------------	----

<b>Safety Precautions</b>	P2
---------------------------	----

<b>Identification of Controls</b>	P3-P5
-----------------------------------	-------

<i>Main Unit</i>	P3
------------------	----

<i>Remote control unit</i>	P4-P5
----------------------------	-------

<b>SETUP Menu Setting</b>	P6-P8
---------------------------	-------

<i>General Setup Page</i>	P6
---------------------------	----

<i>Audio Setup Page</i>	P6-P7
-------------------------	-------

<i>Video Setup Page</i>	P7
-------------------------	----

<i>Preference Page</i>	P7-P8
------------------------	-------

<i>Password Setup Page</i>	P8
----------------------------	----

<b>Battery Parameters</b>	P9
---------------------------	----

<b>Parameters and specifications</b>	P9
--------------------------------------	----

<b>Troubleshooting tips</b>	P10
-----------------------------	-----

# Safety Precautions

## WARNING

RISK OF ELECTRIC SHOCK  
DO NOT OPEN



Warning: To reduce the risk of electric shock, do not remove the cover or back of this product. There are no user-serviceable parts inside. Refer servicing to qualified service personnel.



Warning: To reduce the risk of fire or electric shock, do not expose this product to dripping or splashing water, rain, or moisture. Do not place objects filled with water such as vases, on the Product.



Warning: This digital video disc player employs a laser system. Use of controls, adjustments, or the performance of procedures other than those specified herein may result in hazardous radiation Exposure.



Warning: To prevent direct exposure to laser beam, do not open the enclosure. Visible laser radiation when open.



Warning: Never stare directly into the laser beam.



Caution: Do not install this product in a confined space such as a book case or similar unit.



Warning: when the unit using by child, parents must make sure to let the child understand all contents in Instruction book how battery using to guarantee using battery correctly all the time.



Warning: when find battery overheat, swell or dour, please stop using battery and contact service centre for getting replacement.



Warning: do not charging battery on the place of insufficient ventilation such as: mattress, sofa, cushion, soft mat.....



Warning: we will not take any responsibility if user incorrectly use battery, not following our warning instruction label on the battery case.



## Notes on Copyrights:

- It is forbidden by law to copy, broadcast, show, broadcast via cable, play in public, or rent copyrighted material without permission.
- This product features the copy protection function developed by Macrovision. Copy protection signals are recorded on some discs. When recording and playing the pictures of these discs picture noise will appear. This product incorporates copyright protection technology that is protected by method claims of certain U.S. Patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.


### SERIAL NUMBER:

You can find the serial number on the back of the unit. This number is unique to this unit and not available to others. You should record requested information here and retain this guide as a permanent record of your purchase.

Model No. \_\_\_\_\_


Serial No. \_\_\_\_\_

Date of Purchase \_\_\_\_\_

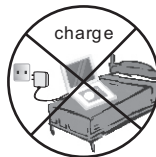

# Identification of Controls


## Main Unit

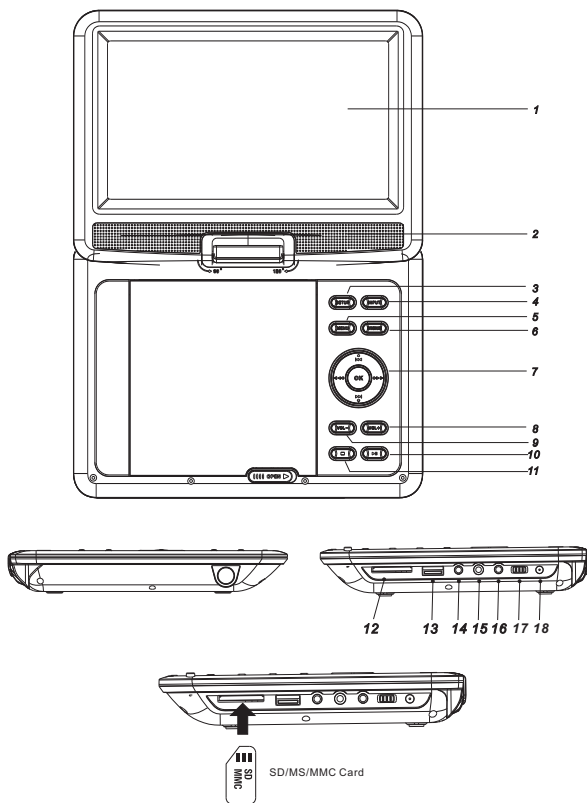


- |   |                         |
|---|-------------------------|
| 1. TFT screen                           | 8. VOL+                 |
| 2. Speakers                             | 9. VOL-                 |
| 3. SETUP                                | 10. PLAY/PAUSE          |
| 4. MODE                                 | 11. STOP                |
| 5. MENU                                 | 12. SD/MMC/MS           |
| 6. DVD/SD/USB                           | 13. USB                 |
| Select input source, DVD/Card/USB       | 14. COAXIAL             |
| 7. UP/DOWN/LEFT/RIGHT                   | 15. Headphone out jacks |
| select an item in the menu.             | 16. AV OUT              |
| when playing CD, VCD, DVD, If available | 17. Power ON/OFF switch |
| UP: previous track                      | 18. DC IN 9-12V         |
| Down: Next track                        |                         |
| Left: Fast reverse                      |                         |
| Right: Fast forward                     |                         |

## Insert the battery

1. Open the battery door.
2. Insert two AAA size batteries.

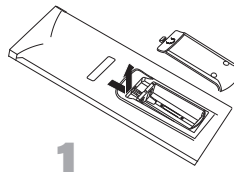

1

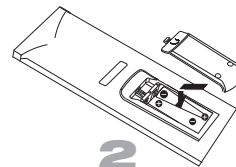


2

### NOTES:

Remove battery during storage or when you are not using the DVD player for a long time.

# Identification of Controls

## Remote control unit

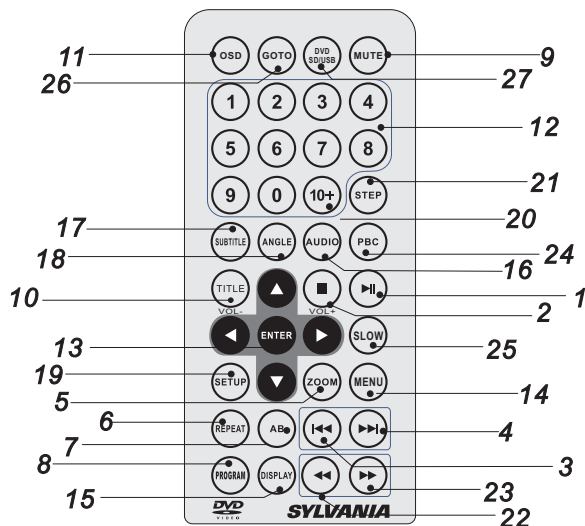

### 1.PLAY/PAUSE

Press PLAY/PAUSE once to pause playback, pressing PLAY/PAUSE second time will resume the playback.

### 2.STOP

When this button is pressed once, the unit records the stopped point, from where playback will resume if ENTER is pressed afterwards. But if STOP button is pressed again instead of ENTER button, there will be no resume function.

### 3.Reverse Skip

Go to previous chapter/ track to the beginning.

### 4.Forward Skip

Go to next chapter/ track.

### 5.ZOOM

**DVD VCD** : Use ZOOM to enlarge or shrink the video image.

1. Press ZOOM during playback or still playback to activate the Zoom function. The square frame appears briefly in the right bottom of the picture.

2. Each press of the ZOOM button changes the TV screen in the following sequence:

2X size → 3X size → 4X size → 1/2 size → 1/3 size → 1/4 size → normal size

**JPEG** : Use ZOOM to enlarge or shrink the picture.

1. Press 'ZOOM'.

2. Used "▶▶" to enlarge, or "◀◀" to shorten the picture.

Use the ▲▼◀▶ button to move through the zoomed picture.

### 6.REPEAT

Press REPEAT during playback to select a desired repeat mode.

**DVD** : you can play a chapter/title/all on a disc.

**VCD CD** : you can play a track/all on a disc.

**Mp3 WMA** : you can select shuffle/ random/ single/ Repeat one/ Repeat folder/ folder play mode on a disc.

### 7.AB

To repeat a segment: press AB once to set the starting point for repeat segment, press it again to set an end point, and the player will repeat the segment from the start to the end point.

### 8.PROGRAM

**DVD VCD CD** : The program function enables you to store your favourite tracks from the disc. Press PROGRAM button, then PROGRAM MENU will appear on screen, now you can use the number key to direct input the titles, chapters or tracks number and select START option. To resume normal playback, press PROGRAM and select STOP option on the program menu.

# Identification of Controls

## Remote control unit

**JPEG** :You can press PROGRAM repeatedly to select the slide show mode, there are 16 types of slide show.

### 9. MUTE

Disable Audio output.

### 10. TITLE

Return to DVD title menu.

### 11. OSD

Switches the OSD language.

### 12. 0-9 NUMBER BUTTON

Selects numbered items in a menu.

### 13. ENTER

Confirms menu selection.

### 14. MENU

Accesses menu on a DVD disc.

### 15. DISPLAY

To display the playtime and status information.

### 16. AUDIO

**DVD** Press AUDIO repeatedly during playback to hear a different audio language or audio track, if available.

**CD** **VCD** Press AUDIO repeatedly during playback to hear a different audio channel (Stereo, Left, or Right).

### 17. SUBTITLE

Press SUBTITLE repeatedly during playback to hear a different subtitle language.

### 18. ANGLE

Press ANGLE will change the view angle, on DVDs that support this feature.

### 19. SETUP

Accesses or removes setup menu.

### 20. 10+ BUTTON

In order to select a track 10 or greater, first press 10+, For example; select track 12, first press 10+, and then press number 2 button.

### 21. STEP

Press STEP once to pause playback, From this station, press STEP to advance one video frame.

### 22. ◀◀ BUTTON

Press ◀◀ BUTTON allow skipping back at 5-level speed(X2->X4->X8->X16->X32), press ENTER button return to normal playback.

### 23. ▶▶ BUTTON

Press ▶▶ BUTTON allow skipping ahead at 5-level speed(X2->X4->X8->X16->X32), press ENTER button return to normal playback.

### 24. PBC

PBC on/off switch. Only for VCD, For other discs, the function is invalid.

### 25. SLOW

Press Slow button repeatedly to enter slow playback, and cycle between different speeds. The speeds are 1/2, 1/4, 1/8, 1/16, and normal.

### 26. GOTO

Goto time point, title or chapter you want in DVD Mode.

### 27. DVD/SD/USB

DVD/CARD/USB.



# SETUP Menu Setting

## General Setup Page

Press SETUP button to get the setup menu. Use direction buttons ▲▼◀▶ to select the preferred item. After finishing settings, press SETUP again to normal display.

The following menu items can be changed:

**GENERAL:** selects the GENERAL PAGE menu.


**AUDIO:** selects the AUDIO PAGE menu.

**VIDEO:** selects the VIDEO PAGE menu.

**PREFERENCE:** selects the PREFERENCE PAGE menu.

**PASSWORD:** selects the PASSWORD PAGE menu.

### General Setup Page

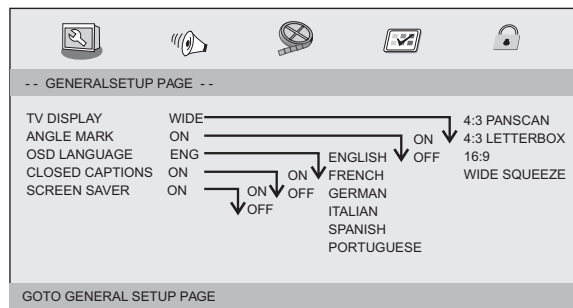

### TV DISPLAY: selects the aspect ratio of the playback picture.

**4:3 PANSCAN:** if you have a normal TV and want both sides of the picture to be trimmed or formatted to fit your TV screen.

**4:3 LETTERBOX:** if you have a normal TV. In this case, a wide picture with black bands on the upper and lower portions of the TV screen will be displayed.

**16:9:** wide screen display.

**Wide Squeeze:** Set screen mode to 4:3.

### Angle Mark

Displays current angle setting information on the right hand corner of the TFT screen if available on the disc.

### OSD Language

You can select your own preferred language settings.

### Closed Captions


Closed captions are data that are hidden in the video signal of some discs. Before you select this function, please ensure that the disc contains closed captions information and your TV set also has this function.

### Screen Saver

This function is used to turn the screen saver On or Off.

## Audio Setup Page

### Audio Setup Page

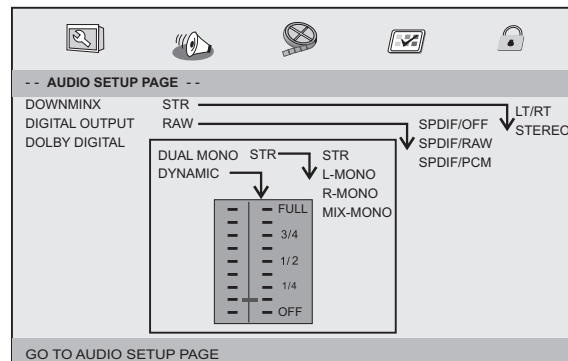

# SETUP Menu Setting

## Audio Setup Page

### ● Downmix

This options allows you to set the stereo analog output of your DVD Player.

→ **LT/RT**: Select this option if your DVD Player is connected to a Dolby Pro Logic decoder.

→ **Stereo**: Select this option when output delivers sound from only the two front speakers.

### ● Digital Output

The function is used to select the SPDIF Output: SPDIF Off, SPDIF /RAW, SPDIF/PCM.

→ **SPDIF Off**: Turns off the SPDIF output.

→ **SPDIF/RAW**: If you have connected your DIGITALAUDIO OUT to a multi-channel decoder/receiver.

→ **SPDIF/PCM**: Only if your receiver is not capable of decoding multi-channel audio.

### ● Dolby digital

The options included in Dolby Digital Setup are: 'Dual Mono ' and 'Dynamic '.

### ● Dual Mono

→ **Stereo**: Left mono sound will send output signals to Left speaker and Right mono sound will send output signals to Right speaker.

→ **L-Mono**: Left mono sound will send output signals to Left speaker and Right speaker.

→ **R-Mono**: Right mono sound will send output signals to Left speaker and Right speaker.


→ **Mix-Mono**: Left and Right mixed mono sound will send output signals to Left and Right speakers.

### ● Dynamic

Dynamic range compression.

## Video Setup Page

### ● Video Setup Page

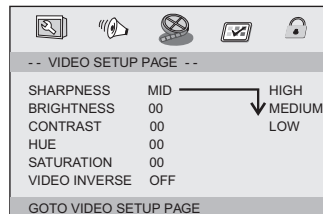


Sharpness, Brightness, Contrast, Hue, Saturation: setting the video quality.

Video Inverse: setting TFT screen display inverse on or off.

## Preference Page

### ● Preference Page

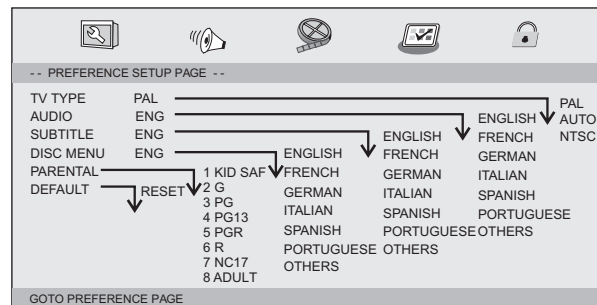

### ● TV Type

Selecting the colour system that corresponds to your TV when AV outputs. This DVD Player is compatible with both NTSC and PAL.



# SETUP Menu Setting

## Preference Page

**PAL**- Select this if the connected TV is PAL system. It will change the video signal of a NTSC disc and output in PAL format.

**NTSC**-Select this if the connected TV is NTSC system. It will change the video signal of a PAL disc and output in NTSC format.

**Auto**: Change the video signal output automatic according to the playing disk format.


- **Audio**: Selects a language for audio (if available).
- **Subtitle**: Selects a language for subtitle (if available).
- **Disc Menu**: Selects a language for disc menu (if available).
- **Parental**

Some DVDs may have a parental level assigned to the complete disc or to certain scenes on the disc. This feature lets you set a playback limitation level. The rating levels are from 1 to 8 and are country dependent. You can prohibit the playing of certain discs that are not suitable for your children or have certain discs played with alternative scenes.

- **Default**: Back to the factory setting.

## Password Setup Page


- **Password Setup Page**

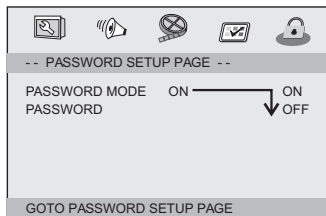

- **Password mode**: Set password mode on/off. If set to off, change parental level will not check password.

## Password Setup Page

- **Password**: select the menu password change page.

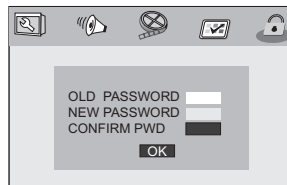

**OLD PASSWORD**: Enter the OLD password, (Factory setting is 1369), and the cursor will jump automatically to NEW PASSWORD.

**NEW PASSWORD**: Enter the NEW password. Enter 4 digits from the remote control unit numeric buttons, and the cursor will automatically jump to CONFIRM PASSWORD.

**CONFIRM PASSWORD**: Confirm the NEW password by entering it again. If the confirmation is incorrect, the cursor will stay in this column. After entering, the correct new password again, the cursor will jump automatically to OK.

**OK**: When cursor is on this button, press ENTER key to confirm setting.

**N** Note: If the password has been changed, the parental and disc lock code will also be changed. The default password (1369) is always active even the password has been changed.

## Parameters and specifications

### Electrical parameters

Item		Standard requirement
Power requirements		: DC 9.5V $\overline{\text{---}}$ 1.5A
Dimensions (Approx.)		: 260(L)X182(W)X37.5(H)MM
Power consumption		: <10W
Weight (Approx.)		: 0.9KG
Operating humidity		: 5 % to 90 %
Output	VIDEO OUT	: 1 Vp-p (75 $\Omega$ )
	AUDIO OUT	: 1.4 Vrms (1 KHz, 0 dB)
	Audio	: Speaker:1WX2,Headphones output, Coaxial output

### System

Laser	:Semiconductor laser, wavelength 650 nm
Signal system	: NTSC / PAL
Frequency response	: 20Hz to 20 kHz(1dB)
Signal-to-noise ratio	:More than 80 dB (ANALOG OUT connectors only)
Dynamic range	:More than 85 dB (DVD/CD)
Accessories	:Video/Audio cable,Remote control, Stereo headphone,Rechargeable battery, Car cigarette Adapter,car Bag

 Note: Design and specifications are subject to change prior notice.

## Battery Parameters

### Battery Parameters

Battery Specifications:

Output: 7.4V

Charge / Discharge Time:

Standard charge time: 3h ~ 4h

Storage and work circumstances:

1. Storage circumstances	Temperature	Humidity
6 months	-20℃ ~ +45℃	65±20%
1 week	-20℃ ~ +65℃	65±20%
2.Work circumstances	Temperature	Humidity
Standard charge	0℃ ~ +45℃	65±20%
Standard discharge	-20℃ ~ +65℃	65±20%

## SETUP Menu Setting

### Troubleshooting tips(Common)

Before calling for service, you can check the following items on symptoms and solutions

**No sound or distorted sound:**

Ensure that the equipment is connected properly.  
Ensure that the input settings for the TV and stereo system are proper.

**No picture:**

Ensure that the equipment is connected properly.  
Ensure that the input setting for the TV is "video".  
Ensure that the LCD is on.

**No play:**

Condensation has formed : wait about 1 to 2 hours to allow the player to dry out.  
This player can't play discs other than DVDs, MP3s and CDs.  
The disc may be dirty and require cleaning .  
Ensure that the disc is installed with the label side up.

**No remote control:**

Check the batteries are installed with the correct polarities(+&-).  
The batteries are depleted: replace them with new ones.  
Point the remote control unit at the remote control sensor and operate.  
Remove the obstacles between the remote control unit and the remote control sensor.  
Operate the remote control unit at a distance of not more than 8 meters from the remote control sensor.

**No key operation(by the unit and/or the remote control) is effective:**

Turn the unit off and then back to on. Alternatively, turn off the unit, disconnect the AC power cord and the re-connect it.(The player may not be operating properly due to lightning, static electricity or some other external factor.)

**Battery does not work**

check whether the battery is out of power or in proper connection.

### Troubleshooting tips(DVD)

**Play does not commence even when title is selected:**

Confirm the "Rating" settings.

**Audio soundtrack and/or subtitle language is not the one selected at the initial settings:**

If the audio soundtrack and/or subtitle language does not exist on the disc, the language selected at the initial setting will not be seen/heard.

**No subtitles:**

Subtitles appear only with discs which contain them.

**Alternative audio soundtrack(or subtitle) language fail to be selected:**


- An alternative language is not selected with discs which do not contain more than one language.
- In the case of some discs, the alternative language cannot be selected by operating the AUDIO or SUBTITLE button. Try selecting it from the DVD menu if one is available.

**Angle cannot be changed:**

This function is dependent on software availability. Even if a disc has a number of angles recorded, these angles may be recorded for specific scenes only.

# **SYLVANIA**

DU LECTEUR DVD PORTABLE

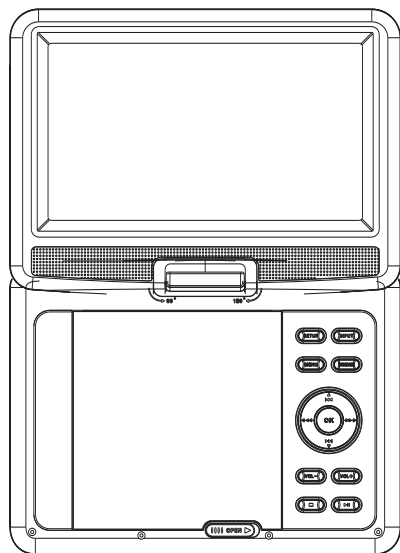

## **GUIDE DE L'UTILISATEUR SDVD9000**



## **DVD PORTABLE**

Avant de brancher, faire fonctionner, et régler cet appareil, veuillez lire attentivement et entièrement ce guide de l'utilisateur.

# Table des matières Contenu

## Table des matières

Table des matières P1

Précautions de sécurité P2

Identification des commandes P3-P5

Unité principale P3

Télécommande P4-P5

Paramétrage du Menu CONFIGURATIONP P6-P8

Page de Configuration générale P6

Page de configuration Audio P6-P7

Page de Configuration Vidéo P7

Page de Préférences P7-P8

Page de Configuration du mot de passe P8

Paramètres de batterie P9

Paramètres et caractéristiques P9

## Précautions de sécurité

### AVERTISSEMENT

RISQUE D'ELECTROCHOC  
NE PAS OUVRIR



Avertissement: Pour réduire le risque d'électrochoc, ne retirez pas le couvercle ou l'arrière de ce produit. Il n'y a pas de pièce à l'intérieur réparable par l'utilisateur. Référez-vous à un personnel de maintenance qualifié.



Avertissement: Pour réduire les risques d'incendie et d'électrochoc, n'exposez pas ce produit à des éclaboussures d'eau de pluie, ou à l'humidité. Ne placez aucun objet rempli d'eau tel qu'un vase au dessus du produit.



Avertissement: Ce lecteur de disque vidéo numérique utilise un système à laser. L'utilisation des commandes, réglages ou la réalisation de procédures autres que celles spécifiées ici, peut entraîner une exposition dangereuse aux radiations.



Avertissement: Pour empêcher l'exposition directe au rayon laser, n'ouvrez pas le boîtier. Le rayon laser est visible lors de l'ouverture.



Avertissement: Ne fixez jamais le rayon laser.



Attention: N'installez pas de produit dans un espace confiné tel qu'une bibliothèque ou un meuble similaire.



Avertissement: Lorsque l'appareil est utilisé par un enfant, les parents doivent faire comprendre à l'enfant tout le contenu du guide d'instructions et comment garantir l'usage des piles pour qu'elles fonctionnent correctement tout le temps.



Avertissement: lorsque la batterie chauffe, gonfle ou est en mauvais état, veuillez arrêter de l'utiliser et contacter le centre de maintenance pour obtenir son remplacement.



Avertissement: ne chargez pas la batterie dans un endroit pas assez ventilé tel que: matelas, sofa, coussin, tapis.....



Avertissement: nous ne serons pas responsable si l'utilisateur utilise incorrectement la batterie, et s'il ne suit pas notre étiquette d'avertissement sur le boîtier de la batterie.



Il est interdit d'utiliser une rallonge ESB supérieure à 250mm pour usage avec le port ESB.

## Notes sur le Copyright:

- Il est interdit de copier, diffuser, montrer, diffuser via câble, lire en public, ou louer un produit sous copyright sans permission.
- Ce produit comporte la fonction de protection contre les copies développée par Macrovision. Des signaux de protection contre les copies sont enregistrés sur certains disques. Lors de l'enregistrement ou lecture des images de ces disques une interférence apparaîtra. Ce produit comporte une technologie de protection de copyright qui est protégée par les déclarations de méthode de certains brevets américains et des droits de propriétés intellectuelles de Macrovision Corporation et d'autres détenteurs de droits. L'utilisation de cette technologie de protection de copyright doit être autorisée par Macrovision Corporation, et est prévue pour la maison et d'autres visionnages limités autorisés par Macrovision Corporation. Une étude du circuit et le démontage est interdit.


### NUMÉRO DE SÉRIE:

Vous trouverez le numéro de série à l'arrière de l'unité. Ce numéro est unique à cet appareil et n'est pas valable pour d'autres. Vous devriez enregistrer les informations demandées ici et conserver ce guide comme enregistrement permanent de votre achat.

N° de Modèle. \_\_\_\_\_

N° de série. \_\_\_\_\_


Date d'achat \_\_\_\_\_

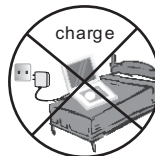

Surchauffe 40°C

# Identification des commandes

## Unité Principale

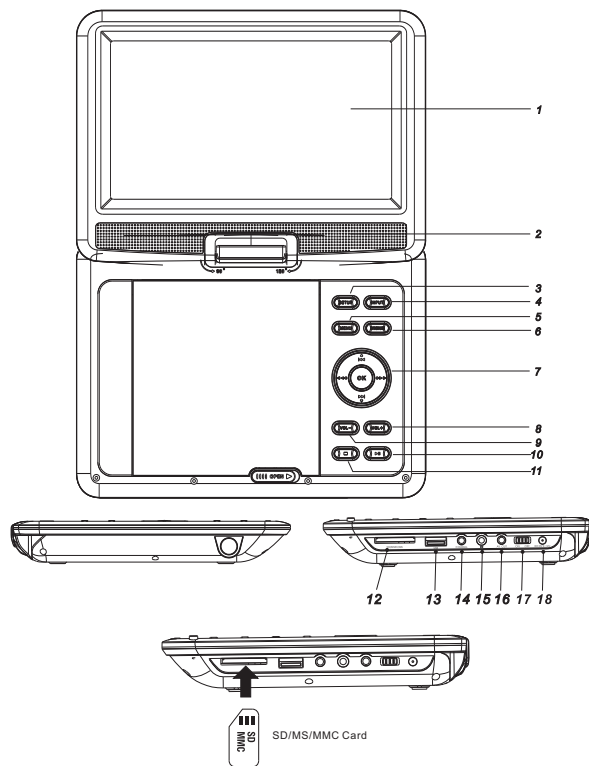


1. Ecran TFT
  2. Haut-parleurs
  3. Configuration (SETUP)
  4. MODE
  5. MENU
  6. DVD/CARTE/ESB  
Sélection de la source d'entrée,  
DVD/carte, ESB.
  7. Précédent/Haut (PREV/UP)
  8. Suivant/Bas (NEXT/DOWN)
  9. OK
  10. Retour rapide/Gauche (FR/LEFT)
  11. Avance rapide/Droite (FF/RIGHT)
  12. VOL+
  13. VOL-
  14. Lecture/Pause (PLAY/PAUSE)
  15. STOP
  16. Carte Mémoire
  17. ESB
  18. COAXIAL
15. Prise écouteurs
  16. Sortie AV (AV OUT)
  17. Interrupteur Marche/Arrêt (ON/OFF)
  18. Entrée courant Continu (9-12V)


## Insertion des piles

1. Ouvrez le couvercle des piles.

2. Insérez 2 piles AAA

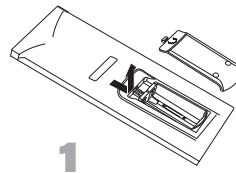

1

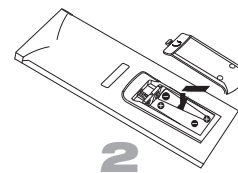

2




### REMARQUES:

Retirez les piles lors du rangement ou lorsque vous n'utilisez le lecteur DVD de longtemps.

# Identification des commandes

## Télécommande

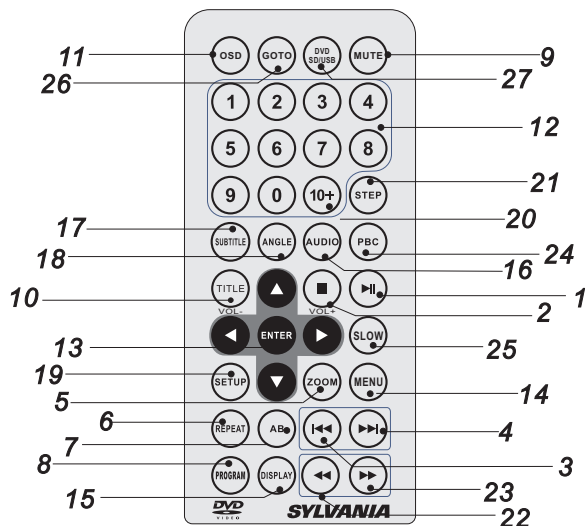

### 1. Lecture/Pause (PLAY/PAUSE)

Appuyez sur PLAY/PAUSE une fois pour mettre en pause, appuyez sur PLAY/PAUSE une seconde fois pour reprendre la lecture.

### 2. STOP

Lors de la pression une fois sur ce bouton, l'appareil enregistre le point d'arrêt et la lecture va reprendre à cet endroit en appuyant sur le bouton ENTER. Mais si le bouton STOP est pressé de nouveau à la place du bouton ENTER, la lecture ne pourra pas reprendre.

### 3. Saut arrière

Va au chapitre/piste précédent.

### 4. Saut avant (forward Skip)

Va au chapitre/piste suivant.

### 5. ZOOM

**DVD VCD** : Utilisez le ZOOM pour agrandir ou rétrécir l'image vidéo.

1. Appuyez sur ZOOM durant la lecture ou continuer la lecture pour activer la fonction Zoom. Un carré apparaît brièvement dans le bas droit de l'image.

2. Chaque pression sur le bouton ZOOM va changer l'écran TV selon la séquence

**PHOTO** Utilisez ZOOM pour agrandir ou rétrécir l'image

1. Appuyez sur 'ZOOM'

2. Utilisez "►►" pour agrandir ou "◄◄" pour rétrécir l'image.

Utilisez les boutons ▲▼◄► pour vous déplacer dans l'image zoomée.

### 6. RÉPÉTITION (REPEAT)

Appuyez sur REPEAT durant la lecture pour sélectionner le mode de répétition voulu.

**DVD** : vous pouvez lire un chapitre/titre/tout sur un disque.

**VCD CD** : vous pouvez lire une piste/Toutes sur un disque.

**AUDIO** : Vous pouvez sélectionner le mode de lecture d'un disque à shuffle/ aléatoire/ un seul/ Répéter Un/ Répéter dossier/ dossier.

### 7. AB

Pour répéter un segment: appuyez une fois sur AB pour définir le point de départ du segment à répéter, appuyez de nouveau dessus pour définir le point de fin, et le lecteur lira le segment du point de départ au point de fin.

### 8. PROGRAMME (PROGRAM)

**DVD VCD CD** : La fonction programme vous permet de stocker vos pistes favorites à partir du disque. Appuyez sur PROGRAM , puis le MENU PROGRAMME Apparaîtra, à présent vous pouvez utiliser les touches numériques pour entrer directement les numéros de titres, chapitres ou pistes et sélectionnez l'option START (démarrer).

Pour reprendre la lecture normale, appuyez sur PROGRAM et sélectionnez l'option STOP sur le menu programme.



# Identification des commandes

## Télécommande

**PHOTO** : Vous pouvez appuyer répétitivement sur PROGRAM pour sélectionner le mode diaporama, Il y a 16 types de diaporama.

9. SOURDINE (MUTE)  
Coupe la sortie audio.

10. TITRE (TITLE)  
Revient au menu titre du DVD.

11. OSD  
Permet de sélectionner la langue du menu de l'appareil.

12. 0-9 BOUTONS NUMÉRIQUES  
Sélection des éléments numérotés dans un menu.

13. ENTRE (ENTER)  
Confirme la sélection du menu.

14. MENU  
Accède au menu sur un disque DVD.

15. AFFICHAGE (DISPLAY)  
Affiche le temps de lecture et les informations d'état.

16. AUDIO  
**DVD** Appuyez répétitivement sur AUDIO Durant la lecture pour entendre une langue audio différente ou une piste audio, si disponible.  
**CD** **VCD** Appuyez répétitivement sur AUDIO Durant la lecture pour entendre un canal audio différent (Stéréo, gauche, ou droite).

17. SOUS TITRE (SUBTITLE)  
Appuyez répétitivement sur SUBTITLE Durant la lecture pour entendre des langues de sous titrage différentes.

18. ANGLE  
Appuyez sur ANGLE pour changer l'angle de vue, sur un DVD qui prend en charge cette fonctionnalité.

19. CONFIGURATION (SETUP)  
Accède ou sort du menu de configuration.

20. BOUTON 10+  
Dans le but de sélectionner la piste 10 ou supérieure, appuyez d'abord sur 10+, Par exemple: pour sélectionner la piste 12, appuyez d'abord sur 10+, et puis appuyez sur le bouton numérique 2.

21. PAS (STEP)  
Appuyez une fois sur STEP pour mettre en pause, à partir de cet état, appuyez sur STEP pour avancer image par image d'une vidéo.

22. BOUTON ◀◀  
Appuyez sur le bouton ◀◀ pour sauter en arrière à une vitesse de niveau 5 (X2->X4->X8->X16->X32), appuyez sur ENTER pour revenir à la lecture normale.

23. BOUTON ▶▶  
Appuyez sur le bouton ▶▶ pour sauter en avant à une vitesse de niveau 5 (X2->X4->X8->X16->X32), appuyez sur ENTER pour revenir à la lecture normale.

24. PBC  
Interrupteur Marche/Arrêt de PBC. Uniquement pour VCD, Pour les autres disques, la fonction est inactive.

25. RALENTI (SLOW)  
Appuyez sur le bouton Slow répétitivement pour faire une lecture au ralenti, et sélectionner les différentes vitesses. Les vitesses sont 1/2, 1/4, 1/8, 1/16, et normale.

26. RECHERCHE (SEARCH)  
Va à moment, titre, ou chapitre que vous souhaitez en mode DVD.

27. DVD/CARTE/ESB  
DVD/CARTE/ESB.  
DIV109 peut lire des clés ESB avec une capacité de stockage jusqu'à 4GB. L'utilisation de clé ESB avec une capacité supérieure peut endommager l'appareil. DIV109 peut lire des cartes mémoires avec une capacité de stockage jusqu'à 4GB. L'utilisation de carte mémoire avec une capacité supérieure peut endommager l'appareil.

# Paramétrage du Menu CONFIGURATION

## Page de Configuration Générale

Appuyez sur le bouton CONFIGURATION (SETUP) pour le menu. Utilisez Les boutons de direction ▲▼◀▶ pour sélectionner le champ souhaité. Après avoir terminé les paramétrages, appuyez de nouveau sur le bouton CONFIGURATION (SETUP) pour revenir à l'affichage normal.

Les champs du menu suivants peuvent être changés:

**GÉÉNÉRAL:** sélectionne le menu PAGE GÉNÉRALE.


**AUDIO:** sélectionne le menu PAGE AUDIO.

**VIDEO:** sélectionne le menu PAGE VIDÉO.

**PREFERENCE :** sélectionne le menu PAGE PRÉFÉRENCE.

**MOT DE PASSE:** sélectionne le menu PAGE DU MOT DE PASSE.

### ● Page de configuration Générale

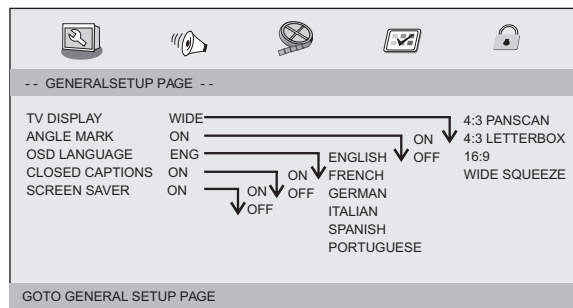

● **AFFICHAGE TV:** sélectionne le ratio d'aspect de l'image lue.  
**4:3 RECADRAGE:** si vous avez une TV normale et que vous voulez que les 2 côtés de l'image soient coupés ou formatés pour qu'elle s'ajuste à votre TV .

**4:3 LETTERBOX:** Si vous avez une TV normale. Dans ce cas, une image large avec des bandes noires en haut et en bas de l'écran de TV s'afficheront.

**16:10:** Affichage en large sur l'écran.

**Ecran large:** définit le mode de l'écran en 4:3

### ● Marque d'angle

Affiche les informations de paramétrage de l'angle actuel dans le coin droit de l'écran TFT si disponible sur le disque.

### ● Langue de l'affichage à l'écran (OSD)

Vous pouvez sélectionner votre langue préférée.

### ● Sous titrage pour malentendants


Ce sont des données qui sont cachées dans le signal vidéo de certains disques. Avant de sélectionner cette fonction, veuillez vous assurer que le disque contient des informations de sous titrage pour malentendants et que votre TV supporte également cette fonction.

### ● Économiseur d'écran

Cette fonction est utilisée pour activer ou désactiver l'économiseur d'écran.

## Page de Configuration Audio

### ● ALLEZ DANS LA PAGE DE CONFIGURATION AUDIO

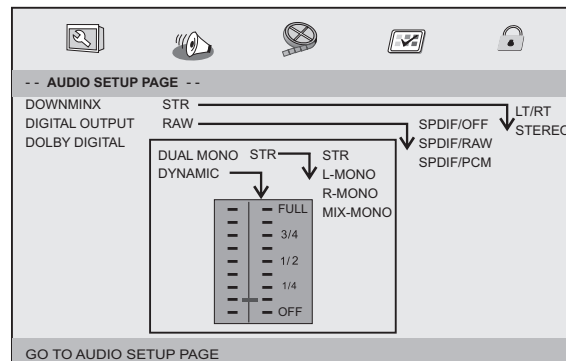

# Paramétrage du Menu Configuration

## Page de Configuration Audio

### ● Downmixage

Cette option vous permet de définir la sortie analogique stéréo de votre lecteur DVD.

→ LT/RT :Sélectionnez cette option si votre lecteur DVD est connecté à un décodeur Dolby Pro Logic.

→ Stéréo :Sélectionnez cette option lorsque la sortie émet un son à partir d'uniquement deux haut-parleurs frontaux.

### ● Sortie numérique

La fonction est utilisée pour sélectionner la sortie SPDIF:SPDIF Off, SPDIF/RAW,SPDIF/PCM.

→ SPDIF Off: Désactive la sortie SPDIF.

→ SPDIF/RAW: Si vous avez connecté votre Sortie Audio Numérique à un décodeur/récepteur multi-canaux.

→ SPDIF/PCM: Uniquement si votre récepteur n'est pas capable de décoder l'audio multi-canaux.

### ● Digital Système

Les options incluses dans la configuration Digital sont: 'Dual Mono' et 'Dynamique'.

### ● Dual Mono

→ Stéréo: Le son mono de gauche sera envoyé aux signaux de sortie pour le haut-parleur de gauche et mono de droite pour le haut-parleur de droite.

→ G-Mono:Le son mono de gauche sera envoyé aux signaux de sortie pour les haut-parleurs gauche et droit.

→ D-Mono: le son mono de droite sera envoyé aux signaux de sortie pour les hauts-parleurs Gauche et Droit .


→ Mix-Mono: le son mono mélangé de gauche et droite sera envoyé aux signaux de sortie pour les haut-parleurs gauche et droit

### ● Dynamique

Compression de gamme dynamique

## Page de Configuration Vidéo

### ● Page de Configuration Vidéo

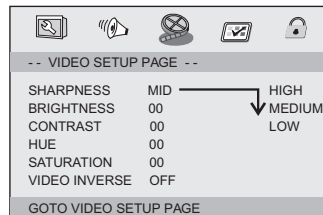


La finesse, Luminosité,Contraste,teinte,Saturation: configurent la qualité vidéo.

Vidéo Inverse: configure l'affichage de l'écran TFT en inverse ou non.

## Page des Préférences

### ● Page des Préférences

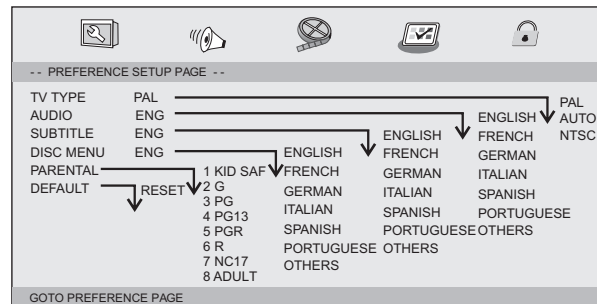

### ● TV Type

Sélection du système de couleurs qui correspond à votre TV lorsque les sorties AV. Ce lecteur est compatible à la fois NTSC et PAL.


# Paramétrage du Menu Configuration

## Page de préférences

- PAL – Sélectionnez ceci si la TV est connectée au système PAL. Cela changera le signal vidéo d'un disque NTSC et sortira au format PAL.
- NTSC- Sélectionnez ceci si la TV est connectée au système NTSC. Cela changera le signal vidéo d'un disque PAL et sortira au format NTSC.
- Auto:Change automatiquement la sortie du signal vidéo selon le format du disque.
- Audio:Sélectionne une langue pour l'audio (si disponible).
  - \* Sous-titrage:Sélectionne une langue de sous-titrage (si disponible).
  - \* Menu du disque:Sélectionne une langue pour le menu du disque (si disponible).
  - \* Contrôle parental
  - \* Certains DVD peuvent avoir un niveau de contrôle parental assigné au disque complet ou à certaines scènes du disque. Cette fonctionnalité vous permet de définir une limitation de lecture. Le classement va de 1 à 8 et dépend des pays. Vous pouvez interdire la lecture de certains disques qui ne conviennent pas à vos enfants ou avoir certains disques lisibles pour certaines scènes.
- Défaut:revient aux paramètres d'usine.

## Page de Configuration du Mot de passe


- Page de Configuration du Mot de passe

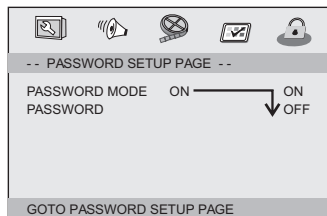

- **Mode Mot de passe:** Active/Désactive le mode mot de passe. Si désactivé, changer le niveau parental ne fera pas de vérification de mot de passe.

## Page de Configuration du mot de passe

- **Mot de passe:** sélectionnez le menu pour changer le mot de passe.

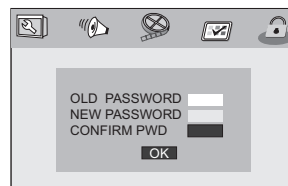

**ANCIEN MOT DE PASSE:** Entrez l'ancien mot de passe, (Défini par défaut en usine à 1369), et le curseur va passer directement à NOUVEAU MOT DE PASSE.

**NOUVEAU MOT DE PASSE:** Entrez le NOUVEAU mot de passe. Entrez 4 chiffres à partir de la télécommande, et le curseur va automatiquement passer à CONFIRMEZ MOT DE PASSE.


**CONFIRMEZ MOT DE PASSE:** Confirmez le NOUVEAU mot de passe en l'entrant de nouveau. Si la confirmation est incorrecte, le curseur va rester dans cette colonne. Après avoir entré le bon mot de passe, le curseur va passer automatiquement sur OK.

**OK:** Lorsque le curseur est sur ce bouton, appuyez sur la touche ENTRER pour confirmer le réglage.

**Remarque:** Si le mot de passe a été changé, le code de verrouillage parental du disque sera également changé. Le mot de passe par défaut (1369) est toujours actif même quand le mot de passe a été changé.


## Paramètres et caractéristiques

### Paramètres électroniques

Element		Besoin standard
Alimentation		: DC 9.5V  1.5A
Dimensions (approx.)		: 260(L)X182(W)X37.5(H)MM
Consommation		: <10W
Poids (approx.)		: 1.3 KG
Humidité de fonctionnement		: 5 % to 90 %
SORTIE (output)	Sortie VIDEO	:1 Vpp (75Ω )
	Audio Sortie	:1.4 Vrms (1 KHz, 0 dB)
	Audio	Haut-parleur:1WX2,Sortie écouteurs, Sortie Coaxiale

### Système

Laser	: Laser Semiconducteur, longueur d'onde 650 nm
Système du Signal	: NTSC / PAL
Réponse en fréquence	: 20Hz à 20 kHz(1dB)
Rapport Signal/bruit	:Plus de 80 dB (Connecteurs Sortie Analogique uniquement)
gamme dynamique	:Plus de 85 dB (DVD/CD)
Accessoires	:télécommande,batterie Rechargeable, Sac et adaptateur allume-cigare

 Remarque: Le design et les caractéristiques sont sujets à changement sans avertissement.

## Paramètres batterie

### Caractéristiques de batterie

Caractéristiques de batterie  
Sortie 7.4V

Temps de Charge / Décharge  
Temps de charge Standard 3h ~ 4h

Stockage et circonstances de fonctionnement

1. Circonstances de stockage	Température	Humidité
6 mois	-20°C ~ +45°C	65±20%
1 semaine	-20°C ~ +65°C	65±20%

2.Circonstances de fonctionnement	Température	Humidité
Charge Standard	0°C ~ +45°C	65±20%
Décharge Standard	-20°C ~ +65°C	65±20%